


Ball Cart Wheel Assembly Instructions

1. Insert Axle into Axle Tube (may need to lightly tap in with a rubber mallet)
2. Slide on Large Washer over axle, inside of wheel assembly only. (both wheels as illustrated)
3. Slide on Tire Assembly with valve stem and grease fitting to inside (both sides)
Note: Check to make sure wheel bushings are in place
4. Slide on Lock Collar and tighten the set screw.
5. Grease wheel hubs thru fittings in wheels and check air pressure in tires.

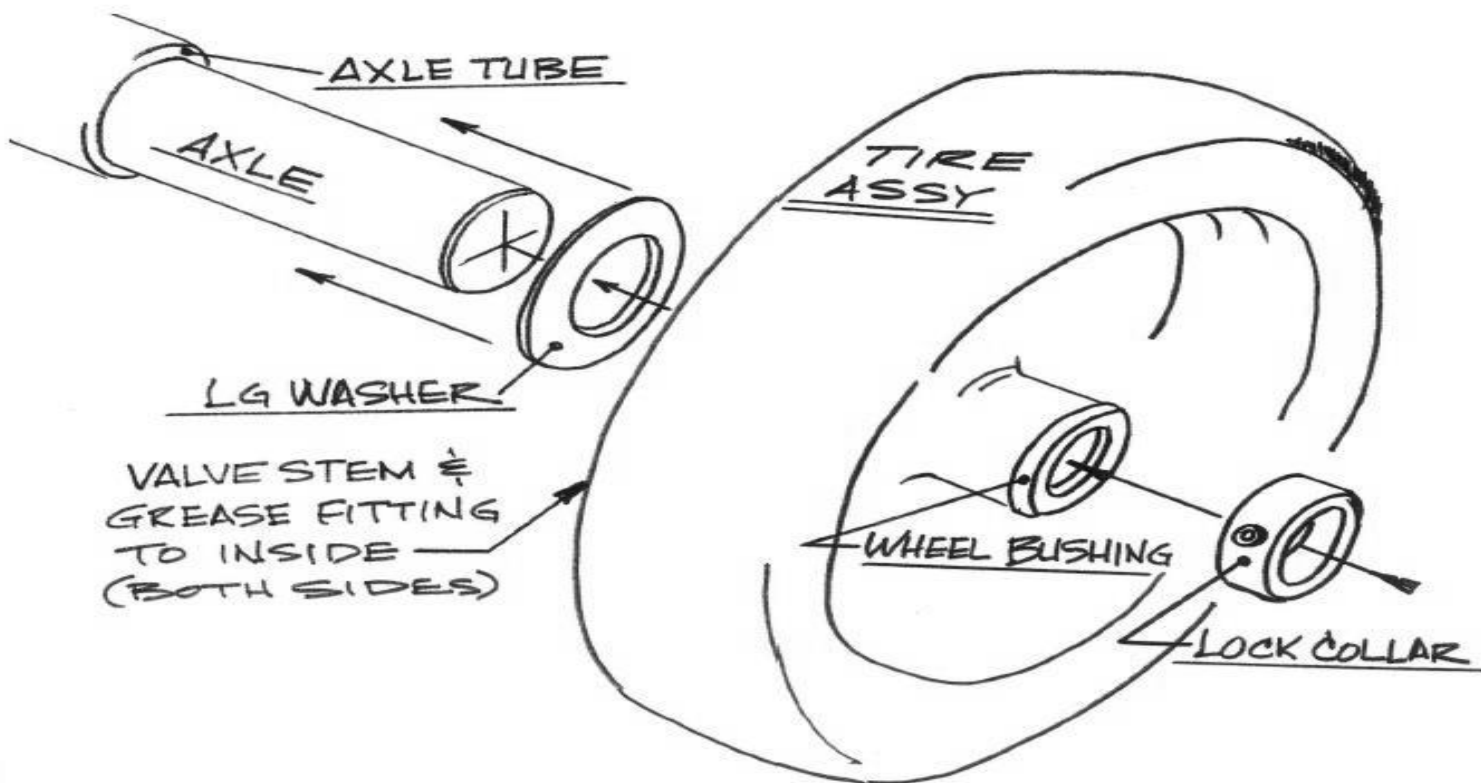

Better Bilt Products, Inc.

900 South Kay Avenue

Addison, IL 60101

Phone: 800-544-4550 / 630-543-6767

Fax: 630-543-0524

Website: bbponline.com