

# Earth Anchor Installation Instructions

Bulk Packs: 3A-EC400, 3A-EC680, 3A-EC880  
Security: 3A-SEC680, 3A-SEC880

Earth anchors w/ attached  
galvanized cable





## BEFORE INSTALLATION:


- **CONFIRM LOCATION OF ALL UNDERGROUND UTILITIES**
- Verify your requirements prior to driving the anchor into the ground. Each anchor application may differ due to soil type, tree size / species, and location. Anchor holding capacity is dependent on soil type and density.

## Tools Required:

- Better Bilt Drive Rod in corresponding size (sold separately) ----->
- Heavy hammer and adjustable wrench (or equivalent)
- Safety glasses and gloves

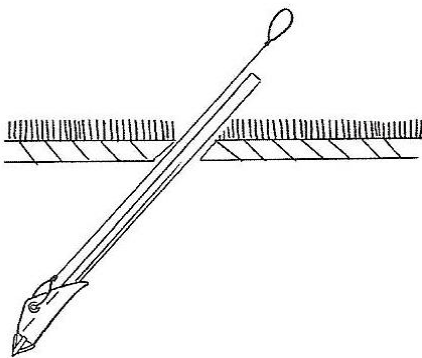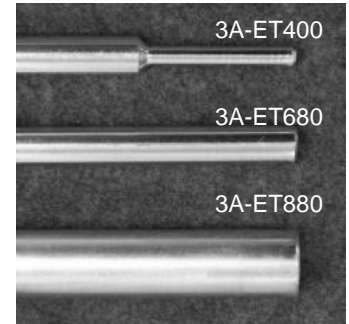

1. Drive earth anchor:
  - a. Locate installation area.
  - b. Pre-drill a 2" pilot hole prior to installing the 680 and 880 model anchors (highly recommended). See step 1.d.
  - c. Insert drive rod onto the Earth Anchor.
  - d. Using a heavy hammer, drive anchor into the ground **at a 45° angle** until only the cable loop is showing above ground level.
  - e. Remove drive rod.

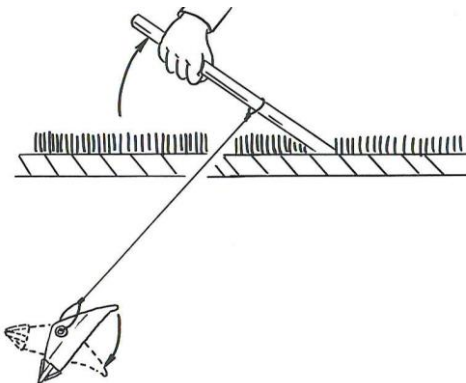

2. Set Earth Anchor:
  - a. Insert drive rod through exposed cable loop.
  - b. Place drive rod end against firm soil for leverage.
  - c. Pry up on drive rod to "set" the anchor. Pull up until no additional movement is noticed. Anchor is "set" for maximum holding capacity when it is perpendicular to the securing cable.